



PROTECT YOUR VINEYARD



1 LONG LIFE PROTECTION
10 YEAR UNDER WARRANTY

2 LABOUR SAVING

3 SIMPLE TO INSTALL AND TO USE



WHAT IS COV'IMPACT®?

COV'IMPACT® IS THE SOLUTION AGAINST HAIL DAMAGE

This net has been made using warp-knit technology. The product includes a mesh system with technical yarn insertion in the production process, offering different functionalities : anti-sliding, spring effect, anti-tear. Fixing cords have been integrated to facilitate installation.

FAST AND PERMANENT INSTALLATION

Fixing cords system facilitates installation and handling of the nets. The installation requires only a metal device at the head of the stakes and a system of spreaders adapted for the bottom. The net stays attached but can be folded to be able to work on the vines manually or machine harvesting.



WHY SHOULD WE CHOOSE A KNITTED NET INSTEAD OF A WOVEN NET ?

The knitted net differs from the woven net by the extensibility of its mesh which gives it maneuverability and durability, easy to install and good handling, low shading effect, good air permeability... This net is always efficient against hail due to the "trampoline" effect when the nets are well extended on the 3 dimensions (Length, width, height).


PARTS DEVELOPED BY SCDC

The hail protective nets are equipped with inserted cords (patent) on the top and bottom for easy installation. SCDC has developed spreaders, specific for each kind of stake (wood or metal).

This system makes the hanging much easier and the nets can be stored on the spreaders during the work on the vines. (rainy season, pruning, harvest...).



Crédit Photo: Ferme expérimentale d'Anglars-Juliac (46)

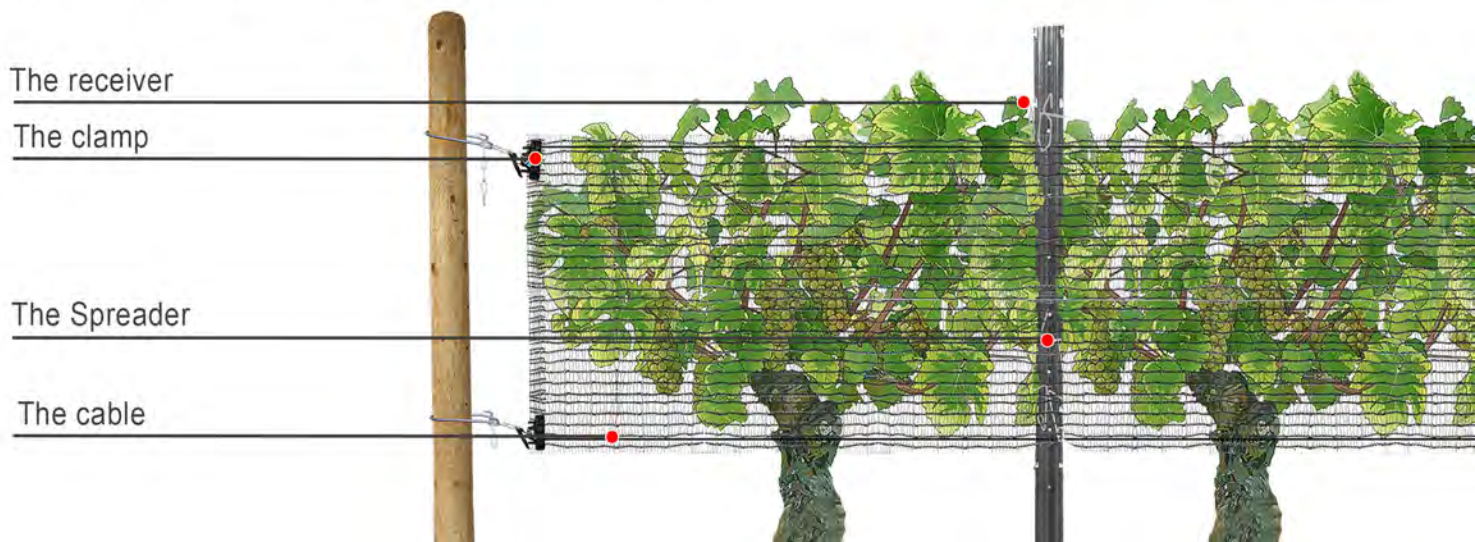

WHY SHOULD WE CHOOSE COV'IMPACT®?



WORKFORCE ECONOMY

Cov'Impact® limits your need for manpower for both the trellising and the lifting. Human intervention is only necessary for the installation of the net, for the rolling up and unrolling of the net allowing the passage of machines.

Quick and easy to install.

Comparison of working time with and without the Cov'Impact® net.



Study made by Sicarex/IFV (69) on a plot of Gamaret, planted at 6250 vines/ha with 2m apart.



CLIMATE AND ENVIRONMENTAL PROTECTION

Cov'Impact® ensures optimal protection of the vineyard against climatic hazards such as hail, frost, wind, burns ...

This net also protects from harmful birds and game.



SUSTAINABLE SOLUTION INTEGRATED INTO THE LANDSCAPE AND RECYCLABLE

Available in different colours, with different shading levels, this net is particularly integrated into the landscape in black.

The knitted nets are resistant to UV due to their reliability of between 10 and 15 years (amortization over about 10 years if no hail because of labor saving). The material (polyethylene) may be recycled at the end of the net life.



AIVALOR



EASY TO INSTALL AND USE

The net installation is easy, fast and needs a small work force. The different installation pieces are made depending on the stake models (wood, steel). Do you want to save time? Ask us for help to install.

Due to the collaboration of SCDC & TEXINOV and the needs of its customers, the solution will evolve (size, colour, hanging pieces...).

COV'IMPACT®, A SOLUTION PROPOSED BY :



SCDC is a specialist in the design conception and manufacture of equipment for vine training. The products are designed and developed to meet the current needs of saving time, economy and longevity of use.

SCDC works in partnership with our wine and fruit growers for the implementation of new techniques and products.



Since 1972, **Texinov Tech**® has specialised in the creation of high-value-added textiles manufactured using warp-knit technology, and is one of Europe's leaders in the field. The company has many years of experience and has produced millions of square meters of 100% made in France textiles, guaranteeing its clients high quality products and responsive service. Agriculture is one of the main sectors of activity for which we cater. We have an extensive range of textiles, including windbreaks, shading, insect netting and hail netting.

Distributor / Commercial Placeholder

CONTACT US:

SCDC scdc-le-fil-metallique.fr

Secteur France Sud-Est / Corse / Suisse
+33 (0)6 65 51 52 01

Secteur France Nord / Benelux / Maroc / UK
+33 (0)6 74 51 80 75

Secteur France Sud
+33 (0)7 66 24 86 28

TEXINOV Tech texinov.com
info@texinov.fr - +33 (0)4 37 05 05 24